



Premium Wax Warmer



Item #303400
tng worldwide • New Hudson, MI 48165
tngworldwide.com • 800.520.6000
©2015 TNG • Made in China



IMPORTANT INSTRUCTIONS — RETAIN FOR FUTURE USE

Congratulations on your purchase of the **ForPro Too Naked Premium Wax Warmer**. Please follow the simple instructions and precautions before operating the unit. The unit comes with a one-year limited warranty. If for any reason you have questions or issues, please contact us toll-free 800-520-6000.

Specifications:

Voltage	110V/60Hz
Power	100W

Instructions For Use:

Warning: Always test temperature of liquid before putting hands into the Wax Warmer.

1. Remove plastic lid from the Wax Warmer.
2. Place the collar ring on the rim of Wax Warmer.
3. Adjust the wax can holder on the wax can for easy handling and place in Wax Warmer.
4. Turn the temperature control knob and set the dial on "HI" until the wax achieves a liquid consistency. This process lasts approximately 15 minutes. For faster heating, place the lid on the warmer.
5. Once liquid, place the dial on "BEADS" for wax beads or "CAN" for wax can. The temperature will remain constant throughout the day. It is important to test the temperature of the wax by placing a small quantity on the inside of wrist. Adjust dial accordingly.
6. When the wax is finished, lift out the can using the wax can holder if it is warm.
7. Turn the warmer off every evening by fully turning the dial counter-clockwise. to "OFF". Cover the warmer with the lid to keep the wax dust-free.
8. To clean the warmer, use wax cleaner with the unit off and while the warmer is still slightly warm.

Precautions:

Note: When using any electric appliance, especially when children are present, basic safety precautions should always be followed.

Read all of the instructions before using your Wax Warmer.

1. Do not place or store the device where it can fall or be pulled into a tub or sink.
2. Do not place the Wax Warmer into water or any liquid. Keep surrounding area dry.
3. Do not reach into water. If the Wax Warmer falls into water, unplug it immediately.

Warning: To reduce risk of burns, electrocution fire or injury.

1. Never operate the device if:
 - It has a damaged cord or plug.
 - It is not working properly.
 - It has been dropped or damaged in any manner.
 - Dropped into water.
2. Do not keep on the highest temperature setting for a long time.
3. Close supervision is important when the Wax Warmer is used by, on or near children.
4. Keep the cord away from heated surfaces.
5. Do not immerse the Wax Warmer into water or other liquids.
6. Avoid hanging the cord over a counter or table where it can be pulled on by children or tripped over unintentionally.
7. Always use the Wax Warmer on a level surface.
8. Unplug the device when not in use. Allow to cool before handling, cleaning or storing the warmer.
9. Do not wrap the cord around the Wax Warmer when in use.
10. Attachments not recommended by the manufacturer may cause hazards.
11. Test temperature of the liquid before putting hand into the device.
12. Use this Wax Warmer only for its intended use as described in the instruction booklet.

Warnings To ensure the normal use of unit.

- Prohibit dry burning.
- Prohibit prolonged heating with the highest temperature.
- Do not pour the wax into the fixed pot for heating.
- Extremely hot liquid may cause burns.
- For professional use only.

Limited Warranty

ForPro offers a one-year limited warranty for defects only. Not responsible for unit due to negligence, dropping, outdoor use or operating near water. If you experience any issues with the Unit please contact us at 800-520-6000. Do not contact or return to the retailer that you purchased from. In case of warranty replacement, please have your proof of purchase available.