

- This product is not a toy and is for adult use only. Keep out of reach of children and pets as serious injury could result.
- Do not use in small confined pet areas without adequate ventilation.
- Do not use outdoors. Intended for household use only.
- Make sure warmer is turned off before removing from wall outlet. Wait for ceramic body and wax to cool before disconnecting. To disconnect, grip plug and pull from wall outlet.

**IMPORTANT: Never use with an extension cord. Do not alter the plug. Do not attempt to defeat this safety feature.**



**PURE ESSENTIAL OIL  
WORKS**

Item #306188  
pureessentialoilworks.com • 800.520.6000  
tng worldwide • New Hudson, MI 48165  
©2019 TNG • Made in China

# FESTIVE SNOWMAN

*Ceramic Plug-In Wax Melter  
& Essential Oil Diffuser*



**SCENTWORKS**

**IMPORTANT INSTRUCTIONS — RETAIN FOR FUTURE USE**

Congratulations on your purchase of the **Scentworks Festive Snowman Ceramic Plug-In Wax Melter & Essential Oil Diffuser**. Please read the instructions and safety tips before use. Your warmer comes with a one-year limited warranty. If for any reason you need service, please call 800-520-6000.

## Assembly

- Insert 15W bulb into the bulb socket on the plug assembly and twist clockwise until the bulb fits snug. Do not over tighten.
- Connect the plug to the ceramic body by placing the bulb inside the hold on the bottom of the ceramic body and twisting 1/4 turn.

## How to Operate

1. Plug your warmer into wall outlet. It has a reversible plug base that rotates 360° to ensure that your warmer will plug in no matter how your outlet was installed. If your warmer will not fit into the outlet in an upright position, simply rotate the plug on the plug assembly 90° or 180° until your warmer fits upright. Make sure it is out of reach of children and pets and will not be knocked over or moved during operation.
2. Place 1 wax melt into the ceramic dish. Do not overfill. As an alternative, you can use a few drops of essential oil instead.
3. Turn light on by flipping on/off toggle switch on base of warmer. Incandescent bulb quickly warms dish to release fragrance in minutes with no open flame. Also serves as a perfect nightlight even without wax melting.
4. To remove leftover wax, let the wax cool and solidify and then carefully pop the wax out of the ceramic dish using a plastic or wood utensil.

## Tips

- If wax is not melting, make sure that the light is on.
- If wax spills on the warmer, use a plastic spatula to scrape the wax off. Use a paper towel to rub off any remaining wax. Do not use metal or any other sharp objects to scrape off melted wax.

## Maintenance

- Electrical fixture is removable to easily clean ceramic plug-in.
- Ceramic body is dishwasher safe. Remove electric fixture with bulb before washing by holding base and twisting 1/4 turn.
- When warming bulb wears out, replace with 15W incandescent bulb.

## Precautions

**CAUTION: To reduce, the risk of fire and electric shock, follow these directions for use:**

- Read all instructions, including these important safeguards in this manual.
- Use caution when handling – the ceramic body may become very hot. Do not touch while light is on. Do not place warmer on or near sensitive or flammable surfaces such as furniture, fabrics and bedding.
- Do not obstruct airflow.
- Use in a properly functioning 110-volt grounded electrical outlet only.
- Hot wax may cause serious injury. Do not add water to hot wax.
- This appliance is not intended to be used for food, drinks or dining services.
- Always allow ceramic body to cool before touching. Do not move warmer when full of hot wax or fragrance.
- Turn off warmer when not in use or before cleaning.
- Turn off, unplug and allow warmer to cool before replacing bulb and before cleaning. Use only a 15 watt bulb.
- Do not immerse electrical base in water or any other liquid or use in damp or wet conditions.
- **EYE IRRITANT:** If liquid wax contact is made with eyes, flush with water for 20 minutes. If irritation persists, consult a physician.

**CAUTION: When using electrical appliances, basic safety precautions should always be followed including:**

- Do not use appliance for other than intended use.
- Do not leave appliance or hot wax unattended when in use.
- Do not place appliance on or near a hot gas or electric burner or in oven.
- The use of accessory attachments not recommended by the manufacturer and may cause injuries.
- Do not operate when the appliance is not working properly or when it has been damaged in any manner.