Precautions

- Please use correct voltage for the lamp.
- DO NOT use the light in or around water or liquids or humid environments such as bathrooms or near the shower.
- Unplug the light or switch off the power when not being used.
- DO NOT use if power adapter, timer or unit is damaged.
- Keep away from children.
- DO NOT look directly into the light.
- For indoor use only.
- Certain cosmetics or prescriptive lotions can cause sensitivity to the light. Discontinue use immediately.
- DO NOT overexpose the nails or skin to the light.
- DO NOT use gels that are not formulated to cure in the light. It might result in severe chemical burn.
- DO NOT touch or wipe LED bulbs.

Specifications

Size:	9"L x 8.5"W x 3.6"H
Weight:	4.7 lbs.
Wavelength:	365-395nm
Adapter:	Input: 100-240V 50/60Hz 1.5A max
	Output: DC 12.6V == 2.0A
Battery:	12.6V Li-lon battery (rechargeable)
	Input Voltage: 12.6V == 2.0A
	Nominal Capacity: 5000mAh
Power:	64W
Number of bulbs:	28 LED bulbs
Timer:	15s/30s/45s/60s
Accessories:	AC/DC charger/adapter, user manual

Please note that information in this instruction manual may be changed without notice.



Item #621087 emmavsnp.com • 800.520.6000 tng worldwide • New Hudson, MI 48165 ©2019 TNG • Made in China



Rechargeable LED Lamp



IMPORTANT INSTRUCTIONS — RETAIN FOR FUTURE USE


Congratulations on your purchase of the EMMA GENIUS Rechargeable LED Lamp. Please read the instructions and safety tips before use. Your lamp comes with a one-year limited warranty. If for any reason you need service, please call 800-520-6000.

EMMA GENIUS Rechargeable LED Lamp incorporates the latest LED technology and ion battery technology to allow nail techs to use the lamp anywhere, anytime. Lamp includes 28 LED lights that feature incredible 365-395nm wavelengths that not only will cure EMMA gel polish, but any brand gel polish and UV gel. There are even four LED lights uniquely situated to cure the thumbs. Features include:

- 28 powerful LED lights cure EMMA gel polish and any brand gel polish and UV gel and cures one hand at a time. 64W total power allows for maximum shine and wearability.
- Ion battery technology lasts three hours on a single charge, long enough to do 60 clients.
- Includes two flip-up posts to elevate lamp for pedicure.
- Four timing settings: 15s, 30s, 45s and 60s
- LCD display shows curing time and battery life
- Infrared hand sensor, lamp turns on and off when hand or foot is inside and removed
- Magnetic hand plate easily removes for use with pedicures.
- 50,000 hours guaranteed use

TTT

- Metal construction for maximum durability
- Portable handle for ease of use. Take anywhere and store anywhere.
- Includes replaceable adapter/transformer

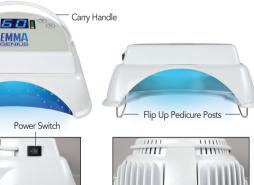

Adapter/Power Ports

How to Operate

The LED light is designed for the use of curing/drving LED formulated gels. The LED lamp has a specialized pre-programmed timer to ensure accurate curing of LED gels. The LED lamp is 64W and has an estimated life of 50,000 hours of use. Lamp is rechargeable. One charge lasts approximately 3 hours of working life.

1. Connect the power adapter to the LED light, then insert the adapter into outlet or power strip to turn the light on and begin to work.

If light's rechargeable battery is charged, then it is not necessary to connect the power adapter to use. Recommend to charge overnight for at least seven hours. (Charger shows red light while charging, green light means fully charged.)

Note: Light has a separate power switch. Turn off the switch and lamp will power off automatically (when not connected to external power source). When using an external power source, the power switch does not work. The lamp will recharge and the background light will be turned on.

2. Default timer is 15s. Touch the button of timer 15s directly and the countdown of 15s will begin and the LED light will turn on. The light will turn off automatically after 15s. To choose another timer, select and touch the switch of desired time (30s/45s/60s) directly. Touch again to turn the light on and begin countdown. To turn off the LED light in advance, touch the switch of your selected timer again to stop.

There is an auto touch-sensor system on this light, so the light can also be turned on by inserting hand or foot inside unit, and turned off by removing hand or foot from unit. (Only the direct or indirect touch of the human body can activate this function. The working principle is the same as touch-screen on a smart phone.) The light will still turn off automatically when timer is finished.

Recommended Curing Times:

Base Coat Gel 30s Gel Polish (lighter colors) 60s Gel Polish (darker colors) 60s Top Coat Gel 30s



Recommended curing times are per laver. For longer wear, cure the top coat for 60 seconds. The surface will remain tacky until the final cure and cleansing of nails.

3. When the lamp is in standby mode for three minutes without any operation, the lamp will enter a dormant state. The background screen light will power off.